




## ELNA 434 CENTER GUIDE FOOT ENGLISH

Turn off the power switch before attaching the foot.


### Machine settings:

Stitch length dial: 3 to 3.5  
Left needle thread tension: 4  
Center needle thread tension: 4  
Right needle thread tension: 4  
Looper threads tension: 3


1. Open the fabric right side up as shown.

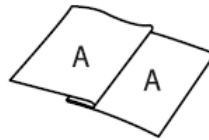

2. Loosen the screw (B) and set the guide plate (D) at the center marking and tighten the screw (B).

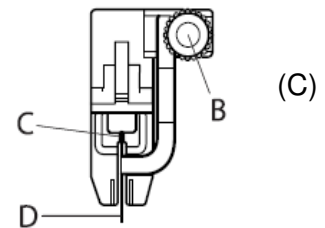

3. Butt the edge of the folded part of fabric against the guide plate (D) and lower the foot. Turn the hand wheel toward you and check that the edge of the folded part is in line with the center of the middle needle (E).

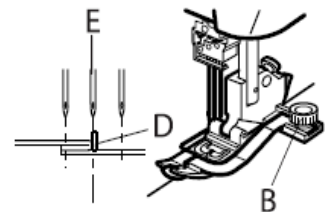

4. If the edge of the folded part is not in line with the middle needle (E), loosen the setscrew (B) to adjust the guide plate (D).

