

Elna 9500 supplementary instruction

These pages complete the instruction manual for the following update:

1. Maximum embroidery speed setting

Embroidery speed can be changed with the speed control slider.

2. Start over key

Start over key is added to the ordinary sewing mode screen.

3. Improved Sewing Application Menu

Cornering start over key is added to the applique window.

Patchwork piece length can be memorized.


4. Additional stitch patterns for ordinary sewing

38 stitch patterns and new Gothic font are added to ordinary sewing mode.

NOTE:

The settings of favorite stitch adjustment will be returned to default values after updating your machine.


P. 23

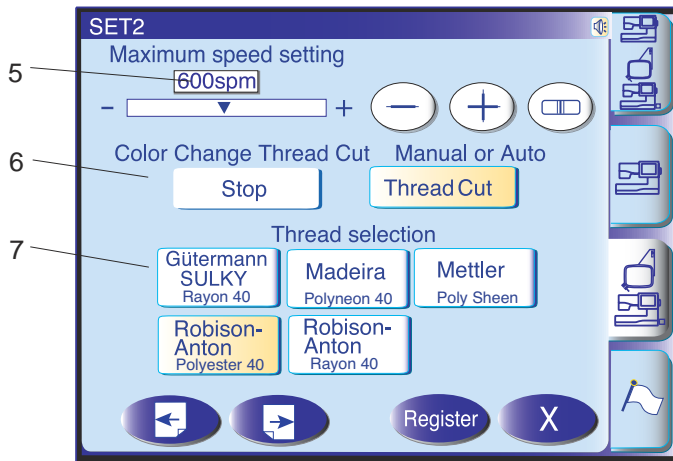

Embroidery mode settings

5 Embroidery maximum speed

The maximum embroidery sewing speed can be changed from 400 to 800 spm in 100 spm intervals by pressing the “+” or “-” key or with the speed control slider.

Press the speed control slider  key if you wish to change the embroidery sewing speed with the speed control slider. The speed can also be changed while the machine is running.


NOTE:

Reduce the sewing speed when sewing patterns with narrow zigzag stitches that tend to distort at high speed.

7 Thread selection

There are four brands of embroidery thread to choose from. Press the key of the thread you wish to use. The color code of the selected brand will be shown on the color/part key along with the name of the color.


P. 25

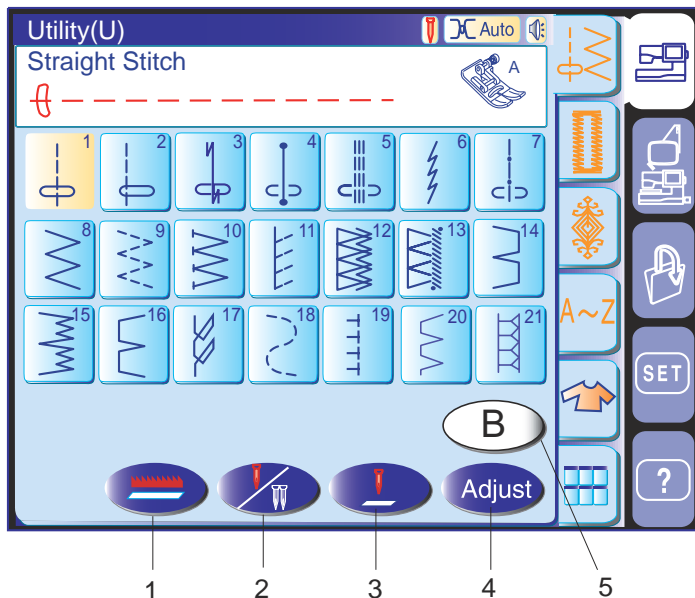

ORDINARY SEWING MODE

Function keys

- 1 Drop feed key:** To drop or raise the feed dogs.
- 2 Twin needle key:** To set the stitch width for twin needle sewing. The key will be grayed out if the selected stitch is not suitable for twin needle sewing.
- 3 Needle position key:** To set the needle position, up or down when the machine stops.
- 4 Adjust key:** To open the manual setting windows for altering the stitch settings.
- 5 Start over key:** To sew again from the first stitch of the pattern.

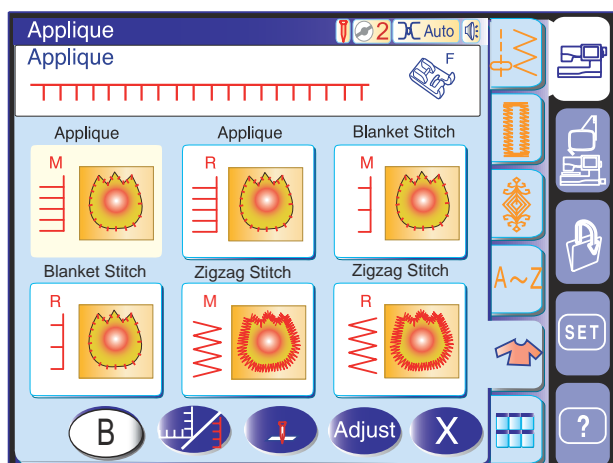


Applique

Cornering for applique


You can select the normal start over or cornering start over for applique stitches. Cornering start over is very helpful when sewing an applique with sharp corners.

Press the cornering  key and the start over  B key will change to the cornering start over  key.

The machine stops with the needle in the down position so you can pivot the fabric to change the sewing direction.

Press the cornering start over  key before sewing in the new direction. The machine will sew the stitch pattern from the beginning without locking stitches.

If you select normal start over, the machine will sew the stitch pattern with locking stitches at the beginning.

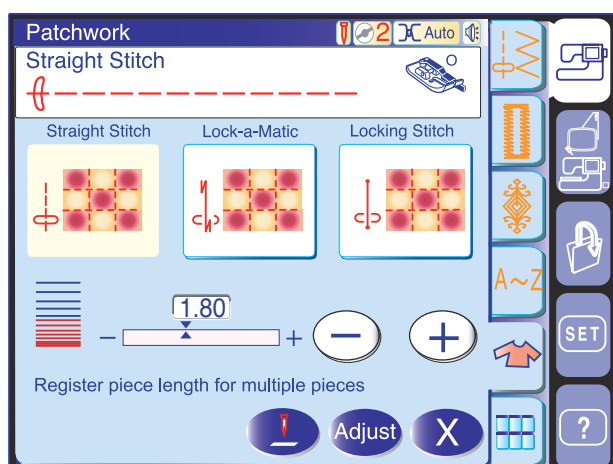

Patchwork


Patchwork piecing



There are 3 stitches for seaming patchwork pieces in this section.

The default stitch length is set at 1.8 mm, ideal for patchwork piecing, but you can fine tune the stitch length by pressing the "+" or "-" key.


Attach 1/4" seam foot O, which helps you to keep a constant 1/4" (6 mm) seam allowance. Put 2 pieces of fabric with right sides together. Place the patchwork pieces under the foot so that the edge of the fabric matches the guide on the presser foot.



When you stop the machine, a message will appear. Press OK key and the seam length is memorized to sew another piece in the same length. Press  key to sew in a different size.

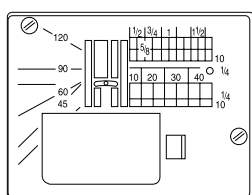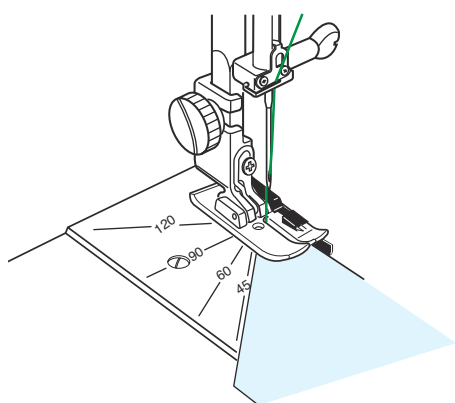

You can seam patchwork pieces at the desired angle without marking, by using the angle scale on the needle plate.

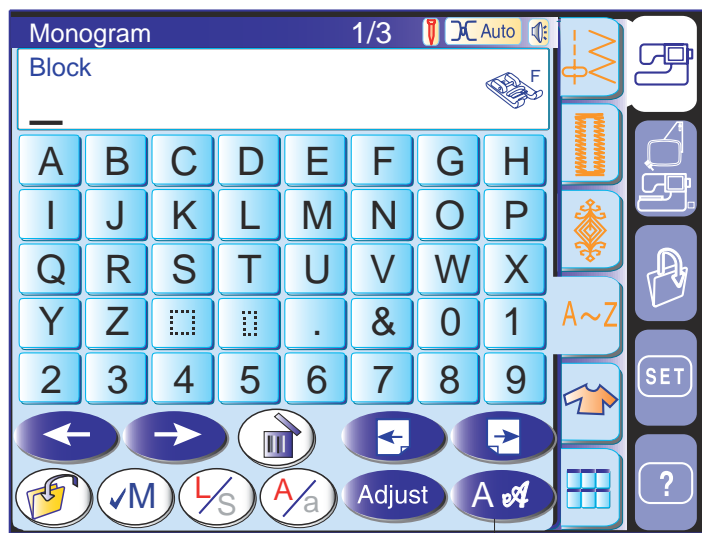

1



Monogramming

You can combine letters and symbols for monogramming.

1 Font key

Pressing this key opens the font selection window. You can select one of the 4 fonts and symbol marks.


NOTE:

Russian characters in Block style will be available when you select Russian language.

STITCH CHART

Ordinary Sewing


U: Utility Stitches

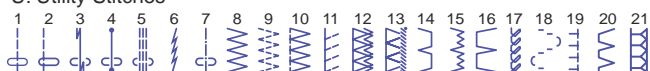

B: Buttonholes and Specialty Stitches



 Q: Patchwork and Quilting Stitches







H: Heirloom Stitches



S: Decorative Satin Stitches



    
D: Decorative Stitches



P: Pictograph Stitches



 Block



Script



BroadWay



Gothic



Symbol

