



Update Version 1.40 of the Programming System **Instruction Manual for Elna 9500**

1. Update of the Programming System

Updates will be supplied to improve and upgrade the programming system of your Elna 9500. You will benefit from the latest developments in technology by installing these updates onto your Elna 9500.

Read the following instructions carefully before starting updating your Elna 9500.

2. Preparing to Update


You need an **ATA PC Card** or a **USB Memory Key** to update your Elna 9500.

Note 1: We strongly recommend the use of FAT 16 formatted memory devices.
To check if your memory device is FAT 16: Open MyComputer and right click on the drive you would like to check (e.g. F) and select Properties. Your media are FAT 16 if "FAT", is listed as the File system.

Note 2: We recommend using high-quality memory devices by well-known manufacturers such as SanDisk.

Note 3: The update can take some time.

- a. Insert the media (ATA PC Card or USB Memory Key) into your computer.
- b. Select the drive where the media is inserted and click the Send button.

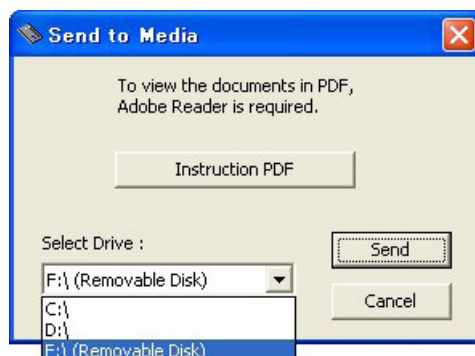



- c. After the file has been copied, safely remove the media from your computer.

3. Starting up the update into your Elna 9500

- a. Turn off you machine.
- b. Insert the media into your Elna 9500

Important Notice

Insert only one media which contains the update program, any other media should be in the machine.

- c. Press and hold on at the same time the **Lock Stitch button** and the **Needle Up/Down button** on your Elna 9500. Turn the power switch "ON".



- d. Be sure to keep the buttons pressed for **at least 3 seconds** until the LCD screen shows the pale blue background.



4. Updating Process

The **Color Bar** will appear on the machine's screen and the updating process will automatically start.



The bar of green colour has to cross all the screen so that the update is complete.

Important Notice

While the updating is in progress, the following actions are strictly prohibited.

- Turning the power switch OFF
- Disconnecting the media
- Pressing any buttons/keys

It will take **several minutes by ATA PC Card** to complete the updating.



When the update is ended, the word "Finish" appears.

Note: Avoid using large capacity media already storing a large number of folders and files. It may take an hour or more to finish the updating process if you use such media.




5. Restarting your Elna 9500

After updating is complete, turn the power switch OFF. Remove the media of the machine.

Wait for 5 seconds and turn it ON again.

Check the screen to see whether the **Version Number** in the opening window has changed.

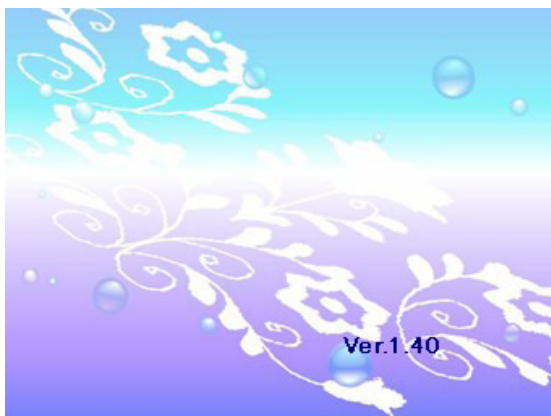


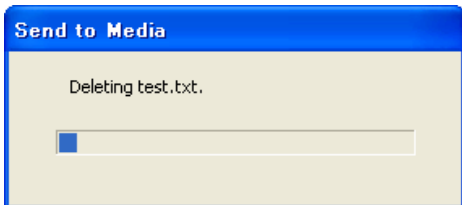
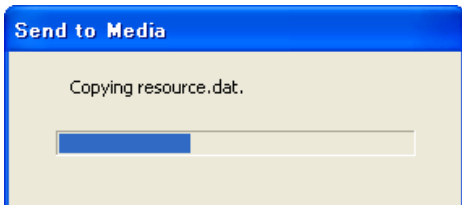



6. Troubleshooting




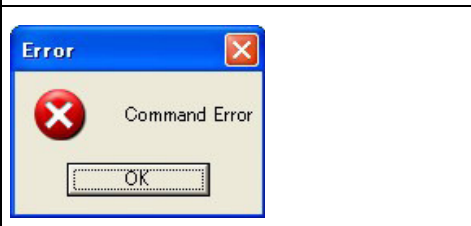



If the update could not be completed, please check the following:

- Make sure the media (ATA PC Card or USB Memory Key) is properly inserted.
- Make sure the update file has been properly copied to the media.
- Make sure the media is FAT 16 formatted.
- Make sure you have not turned the power switch OFF or disconnected the media from the machine before updating was finished.

After checking the above points, try again from Step 2.

7. Message List

Dialog	Message	Note
 <p>The files in the Root Directory on the Media will be erased. Press OK to proceed.</p>	The files in the Root Directory on the Media will be erased. Press OK to proceed.	Confirmation before deleting the file(s) in the root directory on the media when clicking the [Send] button.
 <p>Deleting test.txt.</p>	Deleting ****.	Deleting the file(s) in the root directory on the media.
 <p>Copying resource.dat.</p>	Copying ****.	Loading the update data file onto the media.
 <p>Writing onto Media has completed.</p>	Writing onto Media has completed.	The update data file has been successfully saved on to the selected media.
 <p>Media writing could not be completed.</p>	Media writing could not be completed.	Failed to save the update data file onto the selected media.
 <p>F:\ is not accessible. The device is not ready.</p>	*:\ is not accessible. The device is not ready.	The [Send] button is clicked when the selected drive has no media inserted.

	<p>Disk full while accessing ****.</p>	<p>The media runs out of a memory space while loading the update data file.</p>
	<p>Could not open the PDF file.</p>	<p>The PDF file cannot be opened when clicking the [Instruction PDF] button.</p>
	<p>verup.inf is not found.</p>	<p>The file data required was not found when starting the data loading.</p>
	<p>Command Error.</p>	<p>The file data required was damaged.</p>
	<p>There is an error in verup.inf.</p>	<p>Failed to process the data since the data file is damaged.</p>
	<p>Copying **** is failed.</p>	<p>Failed to load the file data.</p>
	<p>Writing onto Media has been cancelled. There are files that cannot be deleted.</p>	<p>Failed to delete the file(s) in the root directory on the media.</p>