


## BUTTONHOLE FOOT / OVERSIZE

for 9 mm stitch width sewing machines

ref: 202-082-204

This foot makes it possible to sew buttonholes longer than 2.5 cm. It is also effective on tight areas such as cuffs where more freedom of movement is required.

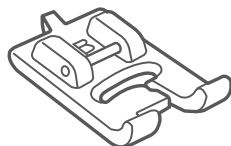

### ⚠ Caution

Make sure to press the Lockout key when replacing the foot or attaching a binder.

For models without the Lockout key, turn the power switch off when attaching and detaching the foot and binder.

Please refer to your machine's instruction manual for accessory attachment and removal information.

### Machine Settings:

Stitch pattern:


Automatic (square) buttonhole

\*Please refer to your machine's instruction manual for sewing procedure of automatic (square) buttonhole.

### To sew:

Before sewing a buttonhole, draw up the bobbin thread up and pull both needle and bobbin threads to the left under the presser foot.

\*Please refer to your machine's instruction manual for drawing up the bobbin thread.

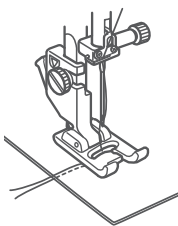

## PIED BOUTONNIÈRE EXTRA-LONGUE

pour machines à coudre avec 9 mm

de largeur de couture Réf: 202-082-204

Ce pied permet de réaliser de longues boutonnières de plus de 2.5 cm. Efficace dans des zones difficiles d'accès telles que manchettes qui nécessitent une grande liberté de mouvements.

### ⚠ Attention

Appuyez sur le bouton de verrouillage lorsque vous remplacez le pied ou fixez un dispositif.

Pour les modèles de machines sans bouton de verrouillage, coupez le contact lorsque vous retirez ou fixez un accessoire.

Référez-vous au manuel d'instructions de votre machine à coudre pour toutes les informations concernant la fixation et le changement d'un accessoire.

### Réglages de la machine:

Motif de point:

Boutonnière automatique (carrée)

\*Référez-vous au manuel d'instructions de votre machine concernant la procédure pour coudre une boutonnière automatique (carrée).

### Pour coudre:

Avant de coudre une boutonnière, tirez vers le haut le fil de canette puis placez celui-ci avec le fil de l'aiguille vers la gauche sous le pied.

\*Référez-vous au manuel d'instructions de votre machine concernant la procédure pour faire sortir le fil de la canette vers le haut.