


## EDGE STITCH FOOT

for 9 mm stitch width sewing machines  
ref: 202-100-209

The guide of this foot aligns edges/seams of fabric so that neatly parallel edge stitching and topstitching can be achieved with ease. Adjust the guide by turning the screw to match the edge/seam precisely.

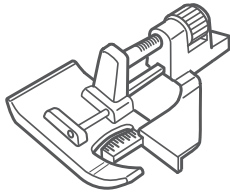

### ⚠ Caution

Make sure to press the Lockout key when replacing the foot or attaching a binder.

For models without the Lockout key, turn the power switch off when attaching and detaching the foot and binder.

Please refer to your machine's instruction manual for accessory attachment and removal information.

### Machine Settings:


Stitch pattern: Straight stitch (adjust the needle drop position as necessary.)

\*Please refer to your machine's instruction manual for presser foot attachment and removal information.

### To sew:

Lower the needle at the starting point by turning the hand wheel. Lower the foot and turn the adjusting screw to align the guide with the fabric edge. Sew while guiding the fabric edge along the guide.

\*The guide's scale is marked in 1 mm units.

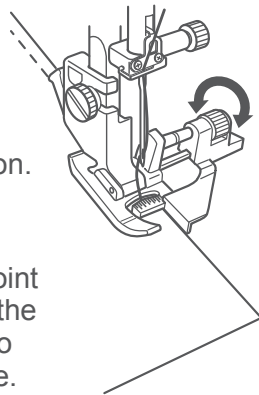

## PIED COUTURE ANGLE DROIT

pour machines à coudre avec 9 mm  
de largeur de couture Réf: 202-100-209

Grâce au guide de ce pied vous pouvez aligner les angles et les bords du tissu pour réaliser facilement des coutures parallèles et des surpiqûres. Ajustez précisément le guide au bord/angle du tissu en tournant la vis de réglage.

### ⚠ Attention

Appuyez sur le bouton de verrouillage lorsque vous remplacez le pied ou fixez un dispositif.

Pour les modèles de machines sans bouton de verrouillage, coupez le contact lorsque vous retirez ou fixez un accessoire.

Référez-vous au manuel d'instructions de votre machine à coudre pour toutes les informations concernant la fixation et le changement d'un accessoire.

### Réglages de la machine:

Motif du point: point droit (ajustez la position de votre aiguille si nécessaire).

\* Référez-vous au manuel d'instructions de votre machine à coudre pour toutes les informations concernant la fixation et le changement du pied de biche.

### Pour coudre:

Abaissez l'aiguille au point de départ en tournant le volant de la machine. Abaissez le pied, puis tournez la vis d'ajustement pour aligner le guide au bord du tissu. Cousez en guidant le bord du tissu le long du guide.

\*L'unité du guide est en mm.